Subject: Graphics card not working Posted by dmatrix12 on Fri, 11 Jul 2008 17:37:45 GMT View Forum Message <> Reply to Message

When i go to turn on my computer, nothing shows up on screen, it's just black. The graphics card is getting power but nothing is happening if I hook up the screen to the Graphics card. Any idea whats wrong?

Subject: Re: Graphics card not working Posted by Lone0001 on Fri, 11 Jul 2008 17:48:37 GMT View Forum Message <> Reply to Message

Is the monitor working properly?

Subject: Re: Graphics card not working Posted by dmatrix12 on Fri, 11 Jul 2008 18:50:03 GMT View Forum Message <> Reply to Message

The moniter is working just fine.

Subject: Re: Graphics card not working Posted by Lone0001 on Fri, 11 Jul 2008 19:04:34 GMT View Forum Message <> Reply to Message

Which graphics card is it and how old is it?

Subject: Re: Graphics card not working Posted by dmatrix12 on Fri, 11 Jul 2008 21:04:35 GMT View Forum Message <> Reply to Message

Its a Apollo and is about 3-4 years old

Subject: Re: Graphics card not working Posted by Lone0001 on Sat, 12 Jul 2008 02:35:37 GMT View Forum Message <> Reply to Message

Is that an on board graphics card?(forgot to ask this question)

its the one which you need to insert into the mother board

Subject: Re: Graphics card not working Posted by Lone0001 on Sat, 12 Jul 2008 13:39:51 GMT View Forum Message <> Reply to Message

Try plugging in another monitor.

Subject: Re: Graphics card not working Posted by dmatrix12 on Sat, 12 Jul 2008 14:02:37 GMT View Forum Message <> Reply to Message

already tried that, didnt work.

Subject: Re: Graphics card not working Posted by IronWarrior on Tue, 15 Jul 2008 19:20:13 GMT View Forum Message <> Reply to Message

Try plugging the monitor into the motherboard instead of the graphic card slot.

If it works, then the problem is with the graphic card.

Subject: Re: Graphics card not working Posted by CarrierII on Tue, 15 Jul 2008 19:59:36 GMT View Forum Message <> Reply to Message

IronWarrior wrote on Tue, 15 July 2008 20:20Try plugging the monitor into the motherboard instead of the graphic card slot.

If it works, then the problem is with the graphic card.

Or, the BIOS is set to use the intenal VGA, and that setting needs to be changed to "external" or similar.